




GETTING STARTED WITH YOUR HiHi

# What's in the boxes?


Below is a list of everything you need to get set up with your HiHi.  
Tablet restraining bolts are also supplied if needed.

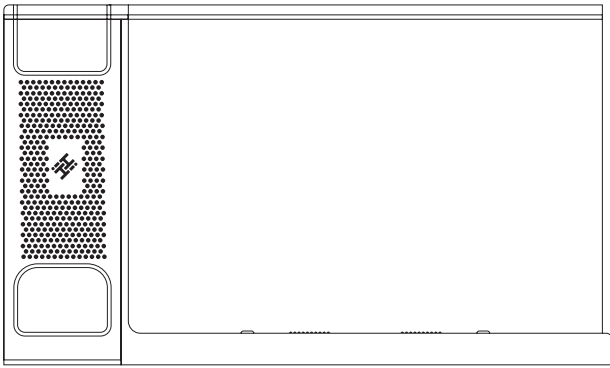


**Base Unit**




**Receiver**

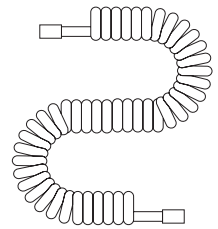


**Curly Cord**

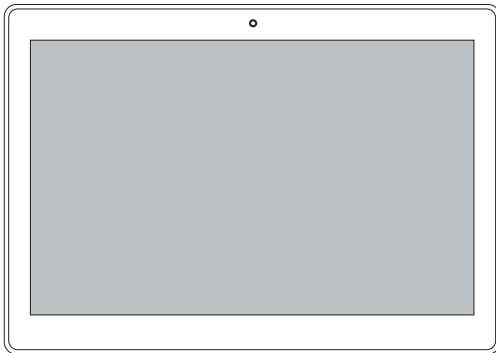

**Tablet**

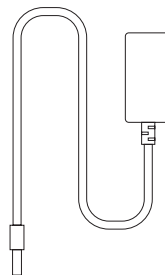

**Power Supply Unit**

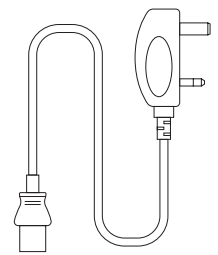


**Power Cord**



GETTING STARTED WITH YOUR HiHi


# Setting up your deskphone

1) Connect the power cord to the power supply unit as pictured.

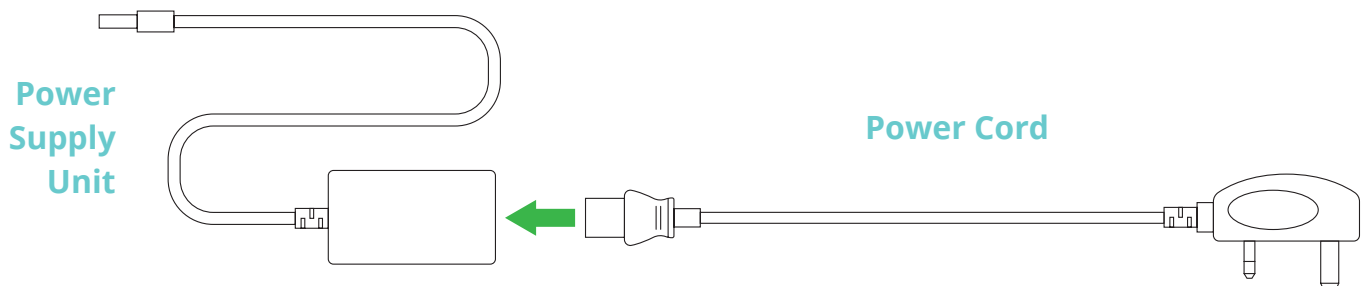

2) The Power Supply Unit Lead can now be plugged into the base unit, as pictured.

*If you are connecting your deskphone via your own Ethernet Cable, now would be the perfect time to connect that too, as shown.*

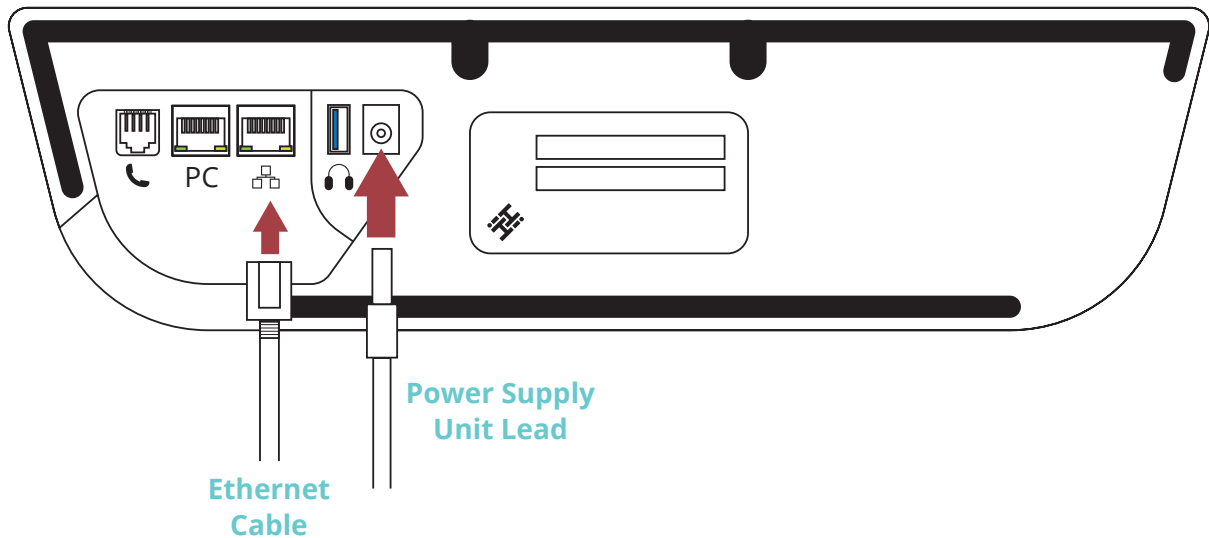




GETTING STARTED WITH YOUR HiHi

# Setting up your deskphone

- 3) The curly cord and receiver can be connected; simply plug the shorter end of the curly cord into the receiver. The curly cord, with receiver attached, can then be connected directly into the base unit.

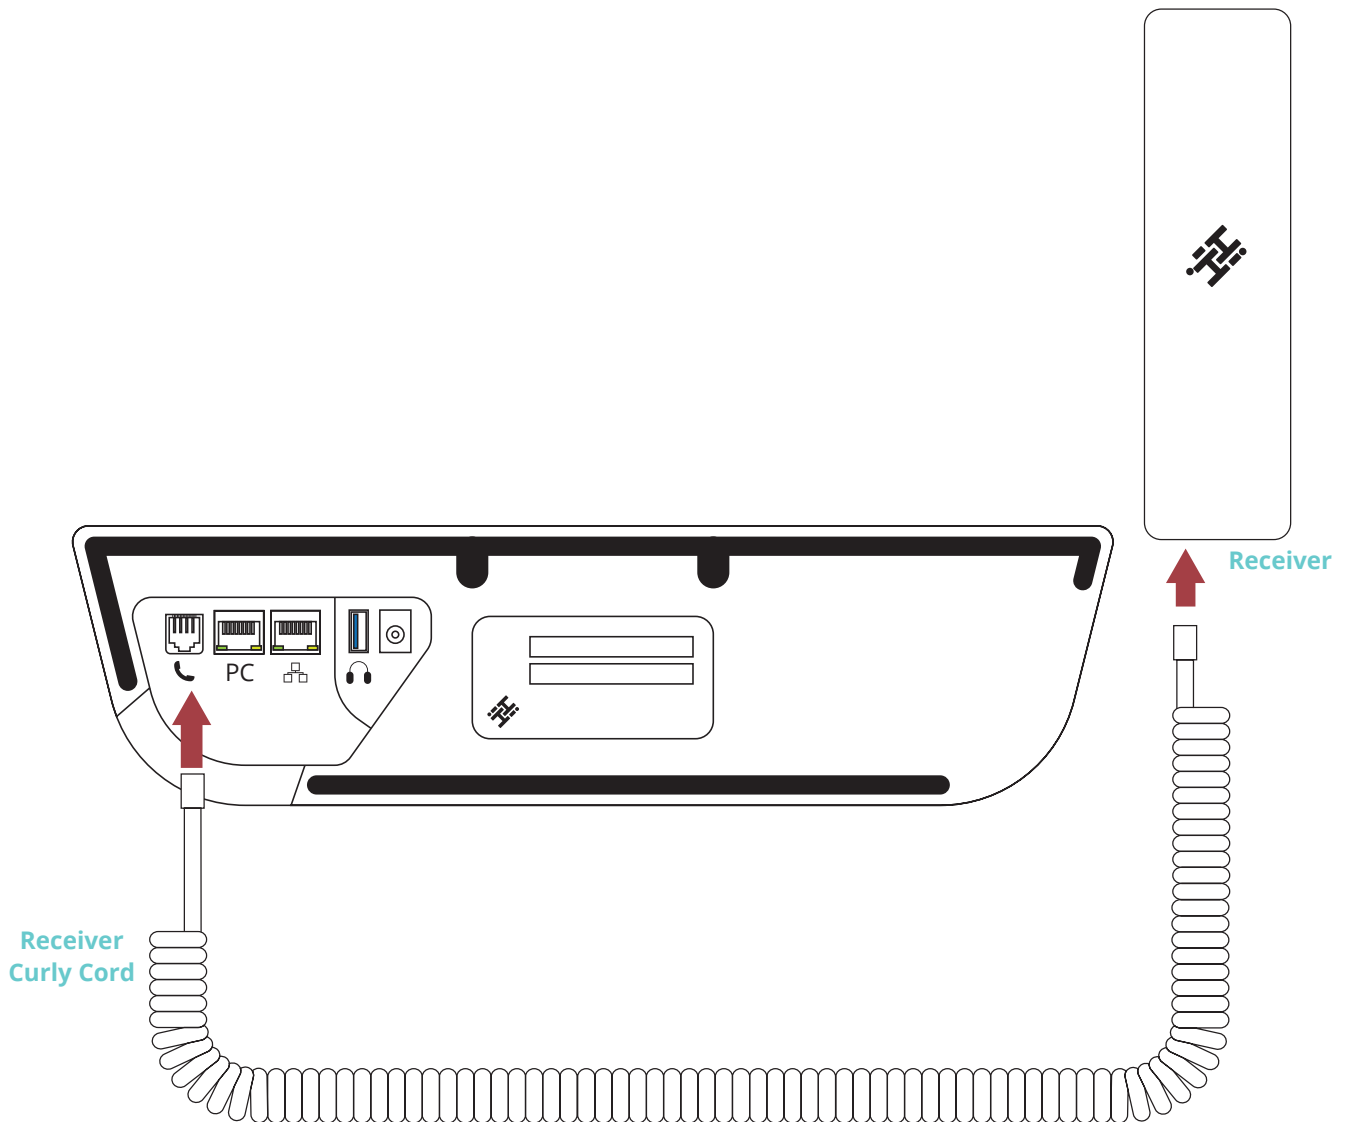

- 4) Once the above steps are complete, plug the power socket into a power outlet and switch on.